



HANDLING MANUAL
HPS40-1 2+2 with CPA



HIRSCHMANN
AUTOMOTIVE

1 Instruction manual - plugging

1.1 Step 1

Collar the connector [1] to the mating side [2] and insert the connector.



TIPP:




Consider the correct orientation.



1.2 Step 2

Insert the connector with force until block.

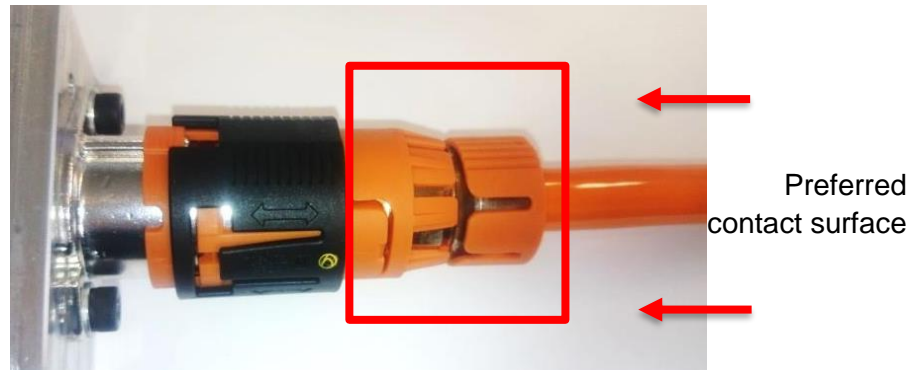

TIPP:




If the connector is not at the final position, the locking hook stays outside.
A movement of the CPA (black part) is not possible.



1.3 Step 3

Move the CPA (black part) to the front block

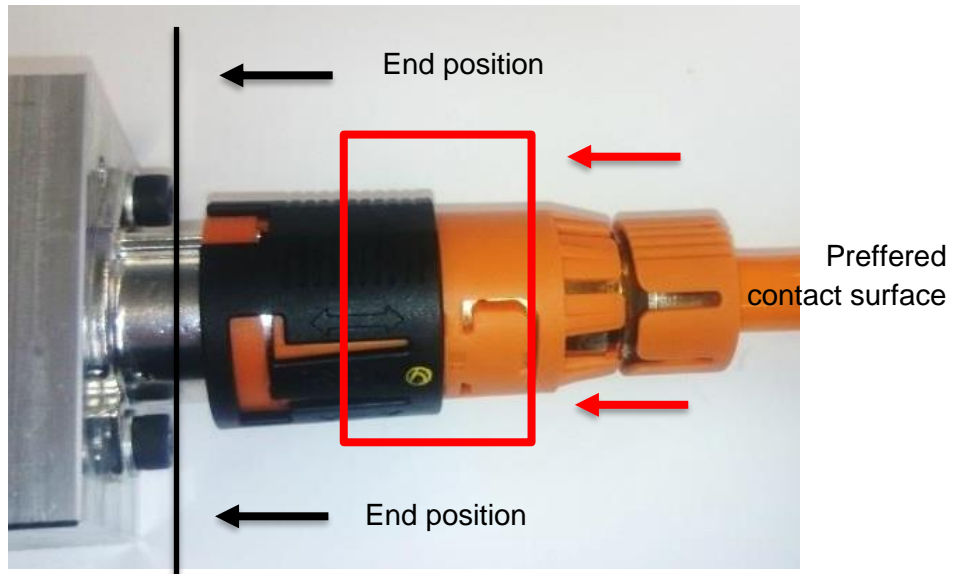

TIPP:




CPA (black part) is at the final position if the marked part is covered.

2 Instruction manual - plugging

2.1 Step 1

Pull the CPA (black part) back to the blocking position.

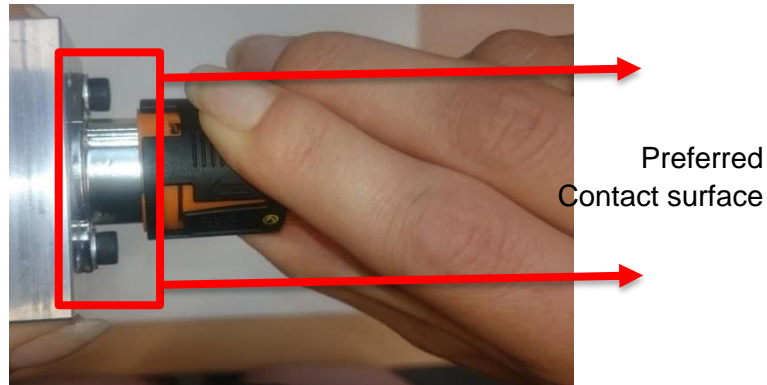

TIPP:




Pulling back by holding at the marked area on both sides simultaneously.



2.2 Step 2

First pressing both locking hooks together and then pull the connector.

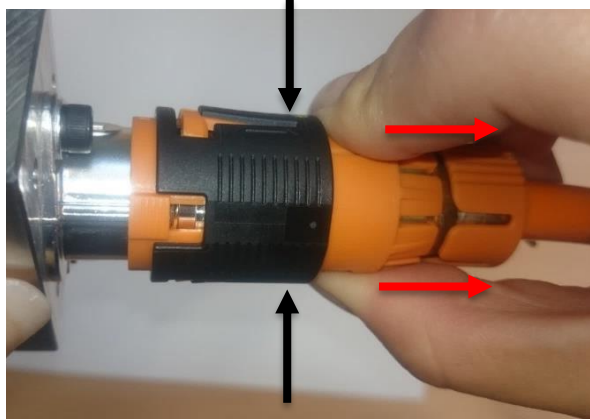

TIPP:



Pressing area of locking hook on both sides.
If it is easier, it is allowed to support by pulling at the cable.